



Installation Manual

S813-1501


Exposed drawing:

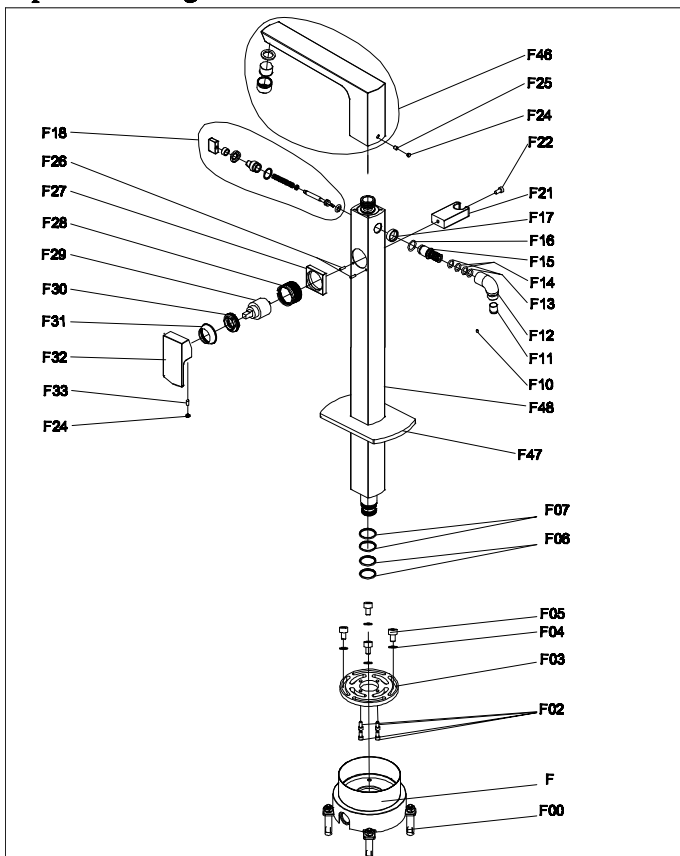


Installation steps:

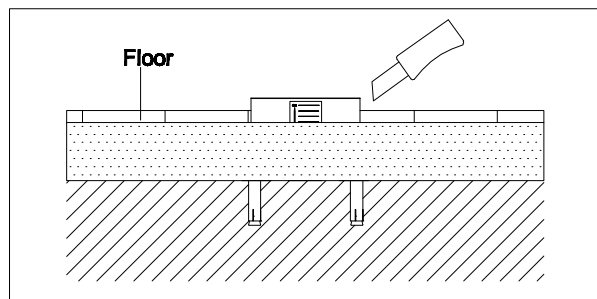


4. Pave the wood or ground tile and cut the exceeded part of the plastic box

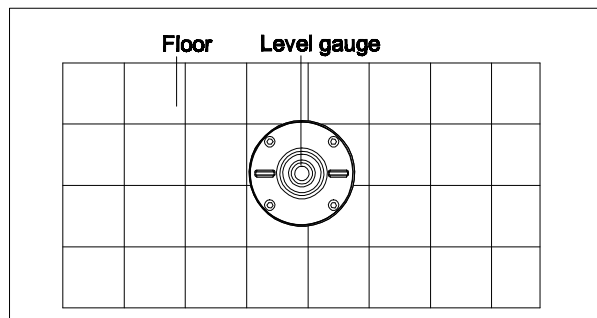


5. The effect drawing after the wood or ground tile paved

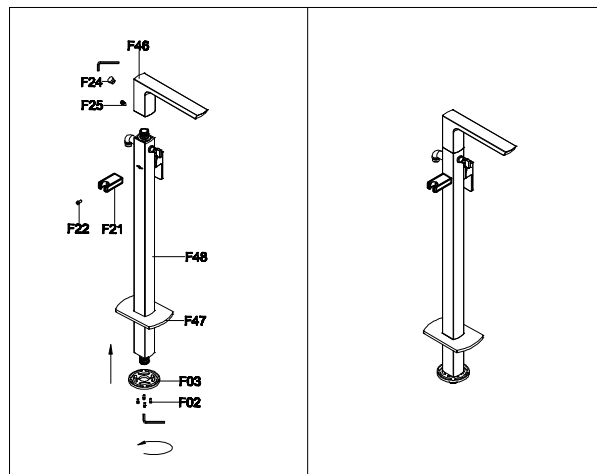


6. Put the covers F47 onto the pole F48 and mount the fixing round plate F03 onto the end of pole F48. Meanwhile fix the spout F46 onto the body, locking with hexagonal spanner

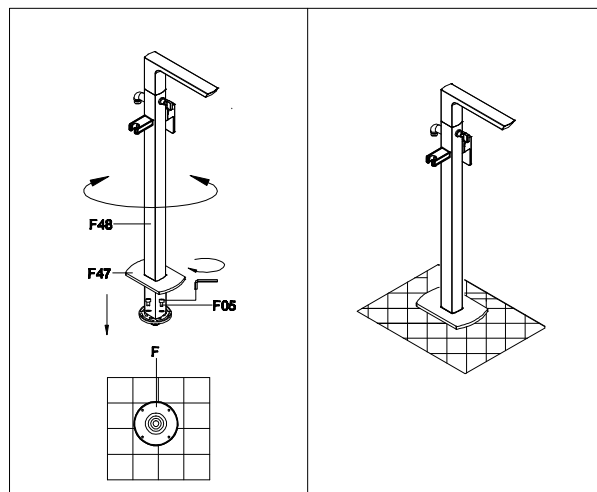


7. Take away the protective cover from the base union F and mount the poles F48 onto the base plate, locking with the nuts F05. Then slide down the cover F47 onto the floor.

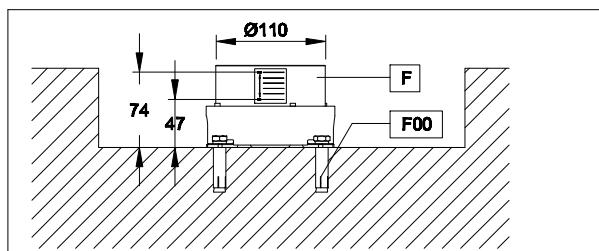

1. Mount the base union F onto the cement ground with F00 and keep it horizontal

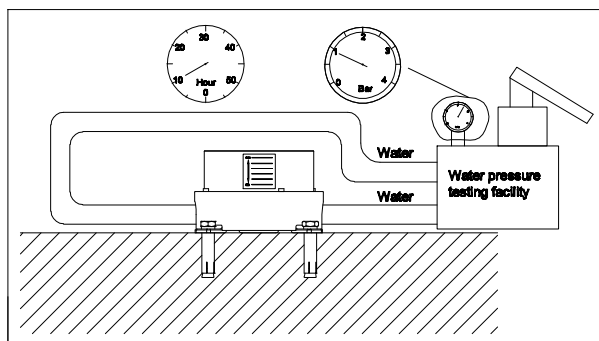

2. Make pressure test for the base union F by 10 hours in 10 bar to assure there is no leakage before the next step

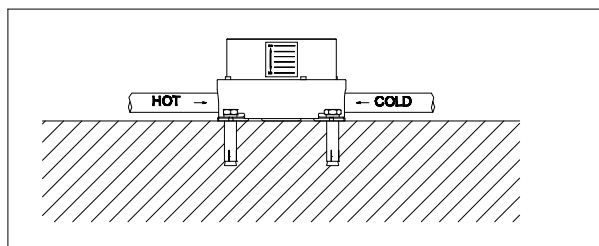

3. Connect the hot/cold water inlets with the feeding pipes